BUTCHERS & BICYCLES®

CHILD SEAT FOR TWO



EN Original instructions

CONTENTS

Illustrations4
Intended use8
Parts of the Child Seat8
Installation8
Installing the seat in the cargo bike8
Removing the seat from the cargo bike9
Instructions for use9
Securing a child in the seat9
Adjusting the seatbelts9
Maintenance10
Removing a seatbelt from the child seat 10
Reinstalling seatbelts10
Reinstalling cushions10
Cleaning10
Safety warnings11
Legal Requirements

HOW TO USE THIS MANUAL

Explanation of symbols

DANGER This symbol indicates that serious injury may occur if the instructions are not followed.

 
ACTION This symbol warns you of mistakes that could result in damage to property or the environment.

This symbol accompanies useful information that will help you get the most out of your cargo bike.

This symbol indicates that you must refer to additional documents, located online at

butchersandbicycles.com/support


A reference to illustrations is given where appropriate:




Finding more information online


You can always find the latest user manuals and technical information about Butchers & Bicycles products on our website at butchersandbicycles.com/support


2.

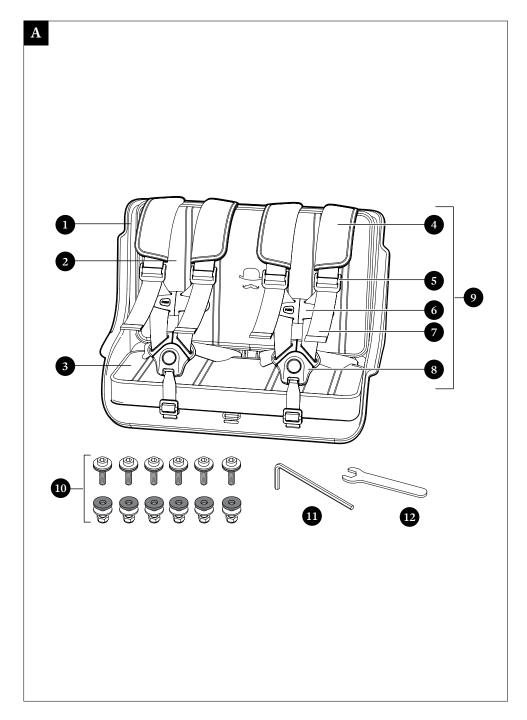

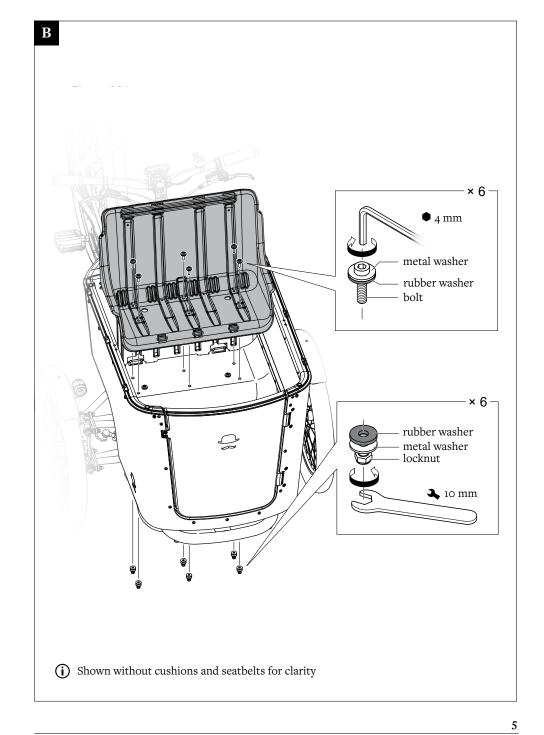

Child Seat for Two (0360)

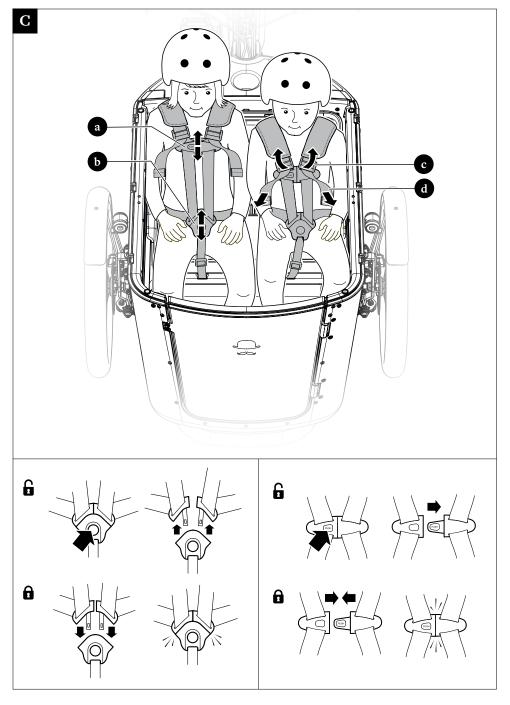

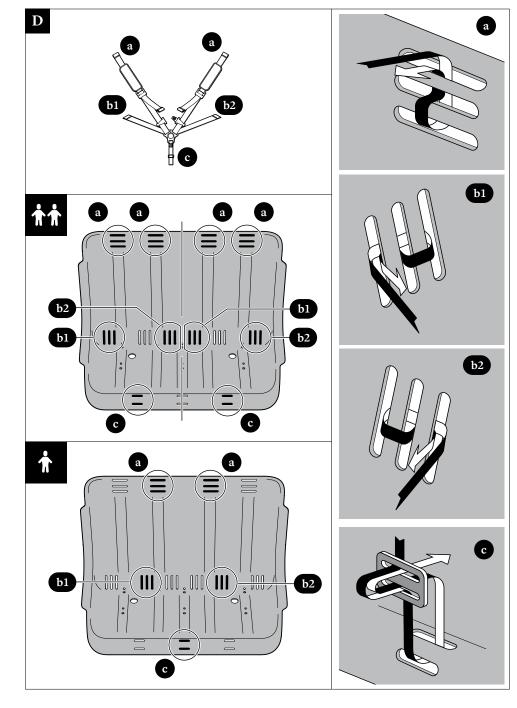

INTENDED USE

This product is designed for carrying up to two children in a cargo bike. This product is intended exclusively for installation in Butchers & Bicycles cargo bikes.

 
Max. total load: 44 kg Recommended weight, each child*: 9–22 kg Recommended child age: 1–6 years

- * It is permissible to carry a single child weighing more than 22 kg, but less than 44 kg (max. total load)
- ► Consult a paediatrician before carrying children younger than 1 year. The children must be capable of sitting unaided for at least as long as the intended cycle journey.
- ► Ensure initially and re-check from time to time that the child's weight and size do not exceed the maximum capacity of the seat.

DANGER Use other than described in this manual can lead to serious injury!

PARTS OF THE CHILD SEAT

Familiarise yourself with the parts of the child seat. The numbers below are referred to throughout this user manual.



- 1 Shell
- 2 Back cushion
- 3 Seat cushion
- 4 Shoulder pad
- 5 Adjustment buckle
- 6 Chest clip
- 7 Adjustment strap
- 8 5 point buckle
- 9 Seatbelt
- 10 Mounting bolts
- 11 4 mm hex key
- 12 10 mm wrench

INSTALLATION

Installing the seat in the cargo bike

• See illustration B

- ► Remove the seat cushion (3) from the child seat to expose the mounting holes.
- ► Place the child seat on top of the raised flat surface inside the Cargo Box and line up the mounting holes in the seat with matching holes in the box.
- ► Insert a bolt into each of the 6 holes, each with a rubber and a metal washer (the rubber washer should be touching the child seat shell)

- ➤ Reach underneath the cargo bike and thread a rubber washer, a metal washer and a locking nut onto each of the 6 mounting bolts (the rubber washer should be touching the bottom of the box)
- ➤ Tighten each bolt using a 10 mm wrench (12) and a 4 mm hex key (11).

 Recommended tightening torque 5–7 Nm.
- ► Re-install seat cushion.

The child seat is backwards compatible with all Butchers & Bicycles MK1-E and MK1 cargo bikes. If your bike didn't come with the 6 mounting holes, contact an autorised Butchers & Bicycles dealer for help with installation.

DANGER Only use this child seat with Butchers & Bicycles MK1-E and MK1 models.

DANGER Check whether all parts of the bike function correctly with the seat mounted.

Removing the seat from the cargo bike

- ▶ Remove the seat cushion.
- ► Using a 4 mm hex key and a 10 mm wrench, undo each of the 6 mounting bolts.
- ► Reach underneath the cargo bike and remove washers and nuts.
- ▶ Remove bolts from the seat.
- ► Re-install the seat cushion and store all bolts, washers and nuts for future use.

INSTRUCTIONS FOR USE

Securing a child in the seat

• See illustrations A, C

- ► Open the 5 point buckle (8) and the chest clip(6). Seat your child so that the 5 point buckle (8) is in the centre of the body.
- ► Put the shoulder pads (4) on each side of the child's neck and bring the two male ends of the 5 point buckle around the hips.
- ▶ Close the 5 point buckle and the chest clip.

When riding, close the 5 point buckle on any seatbelt which is not in use to avoid noise.

Adjusting the seatbelts

• See illustration C

To loosen the seatbelt lift and pull up on the adjustment buckles (c)

To tighten the seatbelt pull on the adjustment straps (d)

Slide the chest clip to the child's armpit level or as close as possible (a)

If necessary, the height of the 5 point buckle can be adjusted up or down (b)

Make sure the seatbelt is tight around the hips and chest. You must tighten the seatbelt if it is so loose that you can pinch the straps between your fingers.

Child Seat for Two (0360)

Butchers & Bicycles

Child Seat for Two (0360)

Butchers & Bicycles

DANGER Ensure that the seatbelts are not loose or able to become trapped in any moving parts, particularly the wheels. This applies also when the cargo bike is ridden without a child in the seat.

DANGER Always use the seatbelts and ensure that the children are restrained in the seat.


MAINTENANCE

Removing a seatbelt from the child seat

- ► Remove both cushions from the child seat to expose the seatbelt attachment points.
- ▶ Remove each seatbelt end from the slots at its attachment point (For the strap holding the 5 point buckle, you will also have to remove it from the plastic adjustment buckle).

Reinstalling seatbelts

 Option 1—Two seatbelts side by side



- ▶ Remove the child seat from the cargo bike.
- ► Remove the cushions (2),(3) from the seat.
- ▶ Install the ends of each seatbelt in the correct locations according to the illustration i.e. install the seatbelt end marked (a) into the location (a), using the technique shown in detail (a), and so on.
- ► Ensure that the seatbelt is securely installed: pull on each of the 5 attachment points and check that the straps do not loosen as you do so.
- ► Replace the cushions.

Option 2 — One seatbelt in the middle

- ▶ Remove the child seat from the cargo bike.
- ▶ Remove the cushions (2),(3) from the seat.
- ▶ Install the ends of the seatbelt in the correct locations according to the illustration D.
- ▶ Ensure that the seatbelt is securely installed: pull on each of the 5 attachment points and check that the straps do not loosen as you do so.
- ▶ Replace the cushions.
- ▶ Store the unused seatbelt for future use.

Reinstalling cushions

The cushions are attached with velcro for easy removal and re-installation.

When reinstalling the cushions, ensure that:

- ▶ the seat cushion (3) protrudes 1 cm in front of the seat shell—this ensures best comfort for the underside of the children's knees.
- ▶ the top edge of the back cushion (2) is in the same height as the slot where shoulder straps emerge from the shell.

Cleaning

Clean the seat shell and cushions with lukewarm soapy water only. The seatbelts can be washed in a washing machine if necessary. Remove the seatbelts from the seat, place them in a washing bag and wash at 40° with little or no detergent. Air dry. Do not tumble dry.

CAUTION Do not use abrasive substances or solvents to clean any part of the child seat. Do not paint or apply decals to the child seat.

SAFETY WARNINGS

A DANGER Ensure that it is not possible for any part of the child's body or clothing to come into contact with any moving part of the cargo bike. Re-check as the child grows.

A DANGER Ensure that there are no sharp objects within the children's reach. Do not carry any items in the bicycle's cargo box that could cause injury to the children in the event of a crash.

DANGER Children in the seat must be clothed more warmly than the rider and protected from rain.

A DANGER Check the seat temperature before seating your child, especially on hot, sunny days.

DANGER Do not attach additional luggage to the child seat. Place any items in the cargo box, or on a suitable carrier on the rear of the cargo bike.

DANGER Do not modify the seat.

A DANGER The cycle may behave differently with children in the seat, particularly with regard to balance, steering and braking. Practice cycling with children in a safe area outside public roads.

DANGER Never leave the cycle parked with a child in the seat unattended. **A** DANGER Do not use the seat if any part is broken. In case of damage to any part of the seat, contact an authorised Butchers & Bicycles dealer to order a replacement.

LEGAL REQUIREMENTS

- ▶ Before using this product, check whether there are any laws specific to the carrying of children in seats attached to cargo bikes that apply in your country.
- ► Always follow local regulations regarding the use of helmets for children and the rider when cycling.

Child Seat for Two (0360)

10

© 2018 Butchers & Bicycles ApS

The information in this document is subject to change without notice.

Version: A_01

Release date: 2018-08-29





User manuals for Butchers & Bicycles products

Scan code or visit butchersandbicycles.com/support

Get support through: support@butchersandbicycles.com

Place orders through: order@butchersandbicycles.com

Butchers & Bicycles ApS | Flæsketorvet 18, 1711 Copenhagen, Denmark butchersandbicycles.com | +45 7199 8808 | support@butchersandbicycles.com